


- | | |
|----------------------|--|
| 1 - GREY WASHER | 40 - LOCKNUT OF SPOUT ON OVERFLOW MONOBLOC |
| 5 - SCREW FOR HANDLE | 41 - METAL WASHER |
| 6 - PLUG | 42 - «O» RING |
| 7 - PLUG WITH O RING | 43 - SPOUT ON OVERFLOW MONOBLOC |
| 8 - PLUG BACKNUT | 44 - «O» RING FOR SPOUT |
| 9 - PLUG SCREW | 45 - WASHER |
| 10 - WASTE SCREW | 46 - 1/2" PLUG |
| 11 - THICKNESS | 1 - WASHER |
| 12 - WASTE | 47 - WASHER |
| 20 - SPONGE WASHER | |

ATTENTION:

Washers 1 and 47 of the overflow must always be installed outside the bath-tub.

- Install both washers 1 and 47 on thin bath-tub (eg : some models of steel bath-tubs).
- Install washer 1 only on thicker bath-tubs (eg : some models of cast iron bath-tubs).

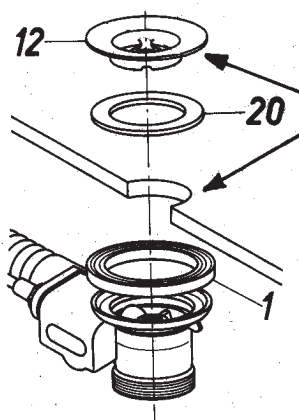

APPLY SILICONE TO ENSURE PERFECT SEALING.



For waste in cast iron pick up the thickness.